


UPPER SHADE



LOWER SHADE

- 1) Print this out on photo paper or thick printable paper at 100% scale.
- 2) Cut out UPPER SHADE and LOWER SHADE along with the outside line.
- 3) Glue them together with black side out.
- 4) Put double-faced tape on indicated place on LOWER SHADE
- 5) Stick the lens shade to the upper part of the lens by bending it softly.
- 6) Use " UPPER SHADE " as a pattern paper when you use thick Black cardboard.

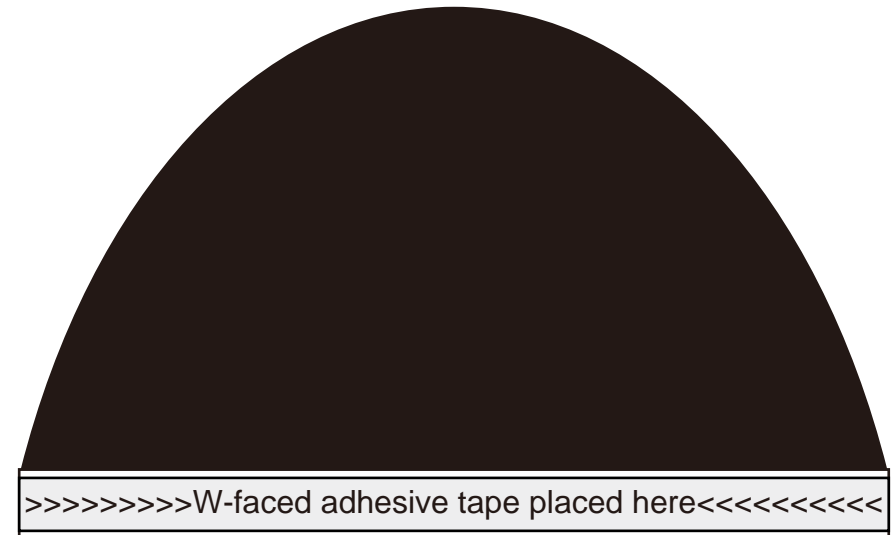